


SR to E-Z-GO TXT

YEAR: 1994.5 TO PRESENT -- 1206 REPLACEMENT

- NOTES:**
- * FUSES REQUIRED FOR ALL INSTALLATIONS
 - * DIODE REQUIRED ACROSS COILS / RELAYS
 - * KSI IS REQUIRED TO BE A SWITCHED INPUT, NOT RESISTIVE
 - > ASSUMES FOOTSWITCH IS OPEN WHEN THROTTLE OFF
 - > ALLTRAX RESERVES THE RIGHT TO CHANGE DOCUMENTATION WITHOUT NOTICE
 - > ALLTRAX MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY, OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED.
 - > SEE OPERATORS MANUAL FOR MORE INFORMATION

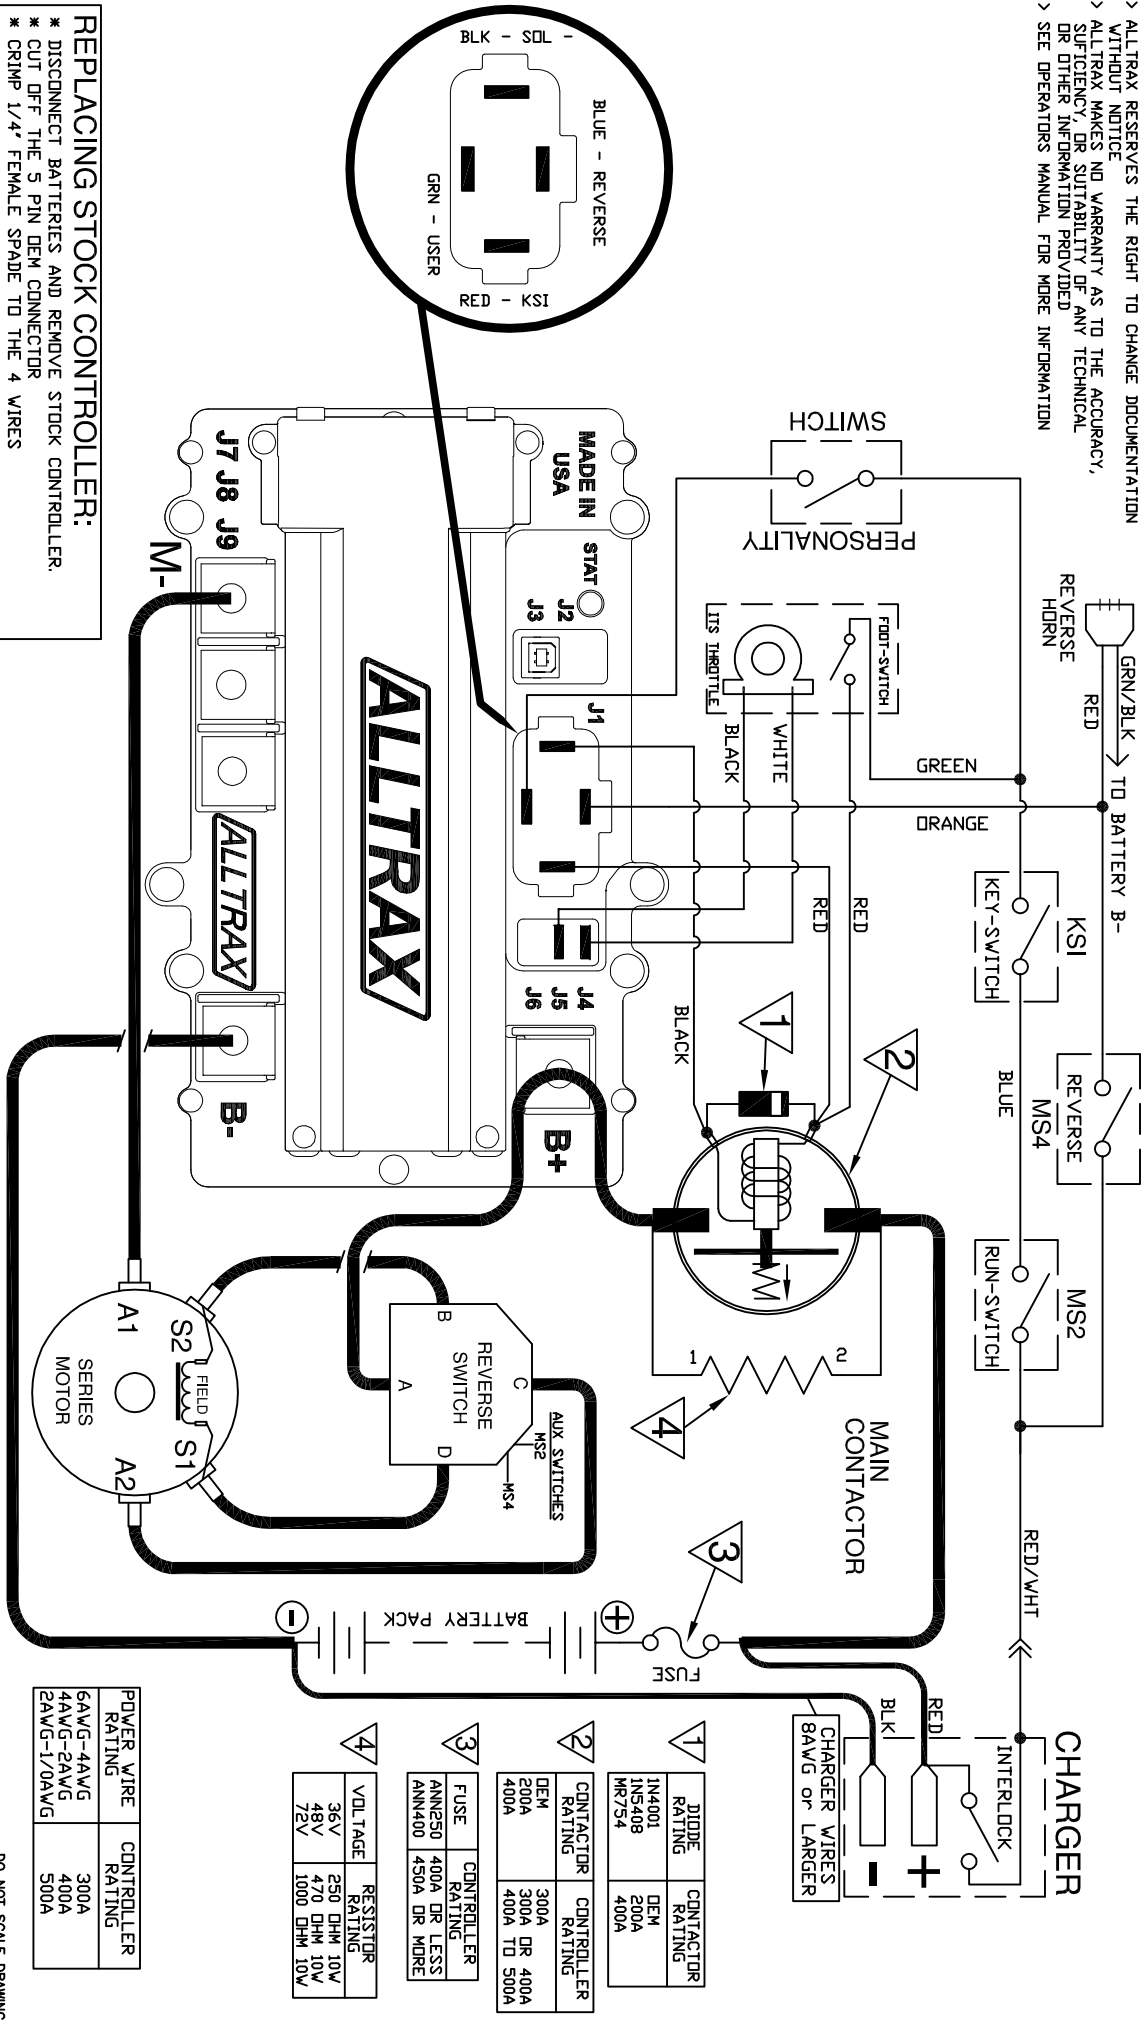

REPLACING STOCK CONTROLLER:

- * DISCONNECT BATTERIES AND REMOVE STOCK CONTROLLER.
- * CUT OFF THE 5 PIN DEM CONNECTOR
- * CRIMP 1/4" FEMALE SPADE TO THE 4 WIRES
- * REMOVE RING TERMINAL OFF THE SMALL WIRE ON THE B-
- * THAT GOES TO THE SOLENOID AND CRIMP 1/4" FEMAL SPADE
- * CONNECT DEM RED WIRE TO THE RED TERMINAL ON CONTROLLER
- * CONNECT DEM ORANGE WIRE TO BLUE TERMINAL ON CONTROLLER
- * CONNECT DEM WHITE WIRE TO J4 ON CONTROLLER
- * CONNECT DEM BLACK WIRE TO J5 ON CONTROLLER
- * CONNECT BLACK WIRE FROM SOLENOID TO BLACK TERMINAL ON CONTROLLER
- * CONNECT LARGE WIRES TO CONTROLLER AS FOLLOWS:
- > A2 to M- < B+ to B+ < B- to B-

REV. ECO.		DATE		APVD		DWG SCALE:		NTS	
B	030117	030117	RC	ENGR	D/Crockett	033116	DRAWN	R CSUK	033116
<p>THIS TECHNICAL DATA IS PROPRIETARY AND IS NOT BE REPRODUCED, RELEASED, OR DISCLOSED IN WHOLE OR IN PART WITHOUT THE PERMISSION OF ALLTRAX INC.</p>									
<p>ALLTRAX 1111 Cheney Creek Rd. Grants Pass, OR 97527 PHONE:(541) 476-3565</p>									
<p>DO NOT SCALE DRAWING</p>									
<p>TITLE SR to EZGO 1994 to Present TXT</p>									
<p>Wiring Diagram</p>									
<p>SIZE DOCUMENT NO. DOC110-036</p>									
<p>REV. A S B</p>									
<p>FILE: _DWG-SR-EZGO-TXT-Wire-Dwg SHEET 1 of 1</p>									